

Low Speed Technology System

# HUrom®

Worlds fastest cold press juicer

Oscar  
HU-400  
Pro

## Instruction Manual

Please read the instructions carefully before using.

Please keep this user's guide where it is easily accessible.

Design and product development may be upgraded without a public notice.

[www.vitality4life.com](http://www.vitality4life.com)





Enjoy the pure flavour and essence of nature with **HUROM**

# CONTENTS

**HUROM** gently presses to retrieve juice rather than forcing juice by shredding and grinding.

**HUROM** is a newly developed patent technology which can retrieve juice not only from fruits and vegetables but also from soy as well.

**HUROM** is also capable of making wheatgrass shot, ice cream, and so much more...

For better use and proper maintenance, please follow the instructions carefully. Please refer to user's manual when experiencing technical difficulties or if you are unsure how to use this product. We will not be liable for any injury or damage that may occur from the incorrect usage of this product.

02 Attachment Listing

04 Safety Precautions

09 Assembly Instruction (Type1)

10 Assembly Instruction (Type2)

13 How to use HUROM slow juicer

 
14 Warning while operating

15 How to disassemble and clean

16 Troubleshooting

18 Product Specifications

# Attachment Listing

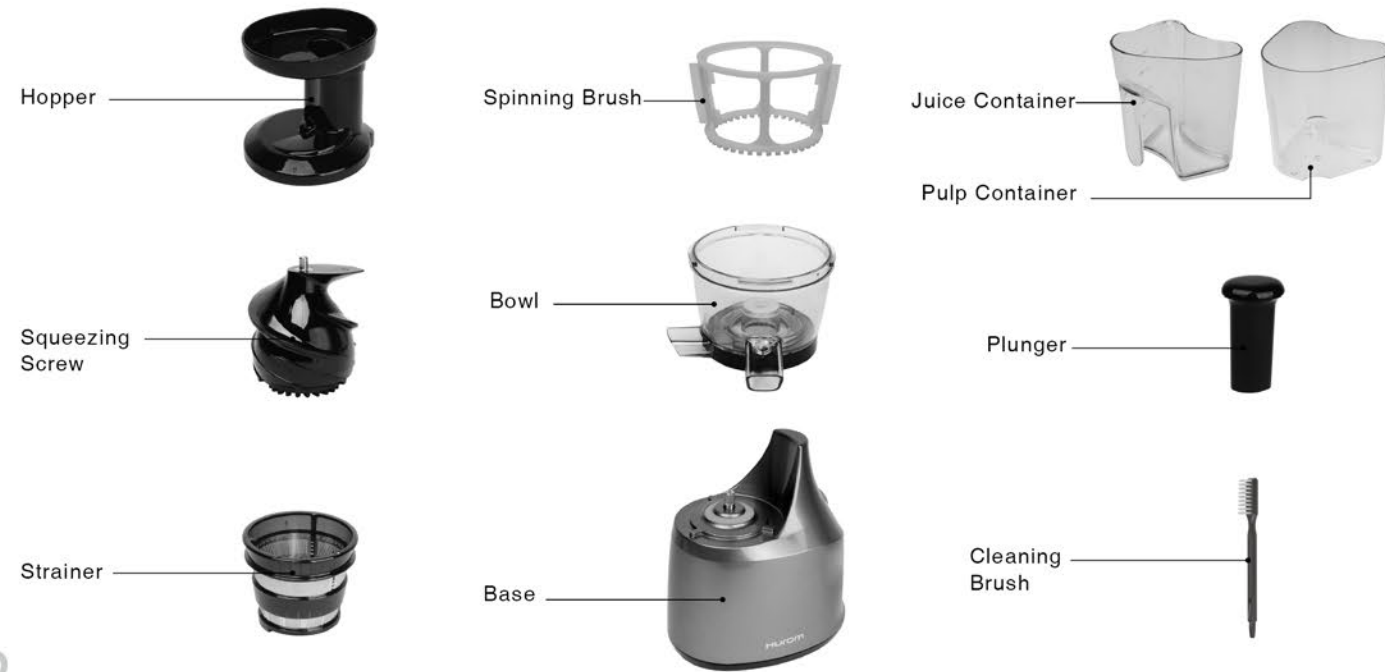

## Attachment Listing

- Hopper (1EA)
- Squeezing Screw (1EA)
- Strainer (1EA)
- Spinning Brush (1EA)
- Bowl (1EA)
- Base (1EA)
- Container (2EA)
- Plunger (1EA)
- Cleaning brush (1EA)



As shown above, place the drum set on the platform

# Safety Precautions

**Please read carefully before using.**  
**Please follow instructions to avoid injuries.**

Warning  
sign



**Warning** : Ignoring this sign may lead to serious injury or even death.



**Caution** : Ignoring this sign may lead to serious damage to the product.

Example



Sign (Danger in health)



Sign (Must not do)



Sign (Restrictions)

## Warning



**Only use power sources of the right voltage type for this product.**



 
**Do not force the plug into outlet; ensure the plug is not near any heat source and is not bent or twisted in anyway.**  
May cause electrocution or fire.



**Do not disassemble the base. Please consult with a repair technician for trouble shooting.**  
Ignoring these instructions may cause electrocution or fire.



**Discontinue use if the electrical cord is damaged or loose.**  
Ignoring these instructions may cause electrocution or fire.



**Do not put any unknown substance into the machine.**  
Ignoring these instructions may cause electrocution or fire.



**Keep the base dry at all times.**  
Ignoring these instructions may cause electrocution or fire.



**Keep away from children or anyone who is not familiar with the usage of this product.**  
Ignoring these instructions may cause electrocution or fire.



**Do not disassemble any parts while operating the machine. Do not put in any unknown objects while operating the machine.**  
Ignoring these instructions may cause injuries or damage to the product.

# Safety Precautions

## Caution



**Do not operate when the hopper is loose.**  
Ignoring these instructions may cause electrocution or fire.



**Do not unplug the outlet when there is a gas exposure, instead open all windows for air ventilation.**  
Ignoring these instructions may cause electrocution or fire.



**Operate on a flat and steady surface.**  
Ignoring these instructions may cause injuries or damage to the product.



**Do not put in any objects that are not instructed inside the machine.**



**Do not remove while operating.**  
Ignoring these instructions may cause injuries or damage to the product.



**Should the squeezing screw jam, put in reverse for 2-3 seconds then try operating again.**  
Ignoring these instructions may cause injuries or damage to the product.



**Do not disassemble while operating.**  
Ignoring these instructions may cause injuries or damage to the product. Please disassemble after the power is off.



**Do not use anything other than the pusher.**  
Ignoring these instructions may cause injuries or damage to the product.



**Do not use more than 30 minutes continuously.**  
Do not use more than 30 minutes continuously.



**Do not submerge the motor in water.**  
Ignoring these instructions may cause injuries or damage to the product.



**After use, remove the plug from the outlet.**  
Do not use cord to remove plug.



**While using, if there is any unusual odour(heat, smoke) stop use immediately and contact the nearest retail center there you purchased the product.**



**The base weighs 6.2kg so please lift the unit with two hands.**  
Ignoring these instructions may cause injuries or damage to the product.

 


**Do not rinse with water that is warmer than 80°C.**  
Ignoring these instructions may cause injuries or damage to the product.





# Assembly instruction – Type 1

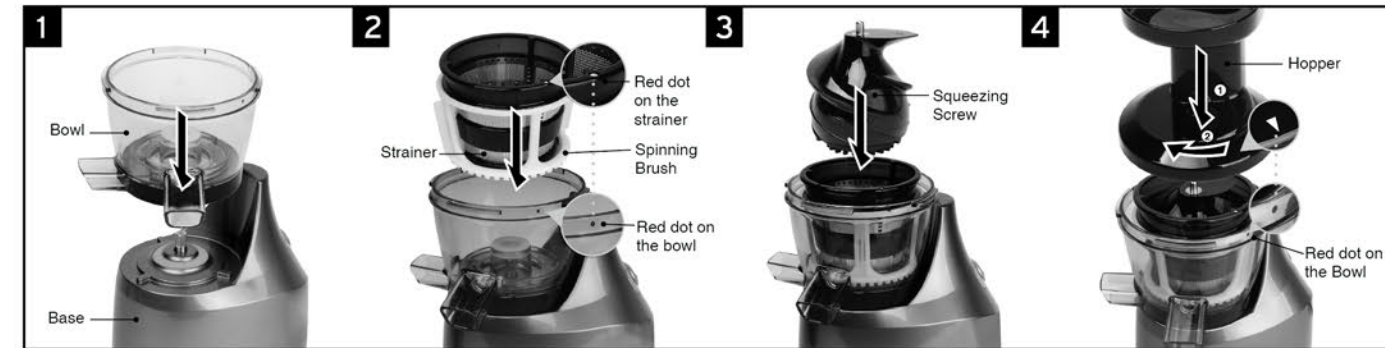

**1. Assemble the bowl on the base.**

① Place the drum on the platform.

**2. Assemble the strainer + spinning brush into the bowl.**

① Make sure the red dot on the strainer and the red dot on the bowl are aligned.

**3. Place the squeezing screw in the center of the bowl.**

**4. Assemble the hopper onto the bowl.**

① Make sure the arrow on the hopper and the red dot on the bowl are aligned.

# Assembly instruction – Type 2

**1**

Place the strainer into the spinning brush

Strainer

Spinning Brush

**2**

Place the strainer + spinning brush into the bowl.

① Make sure the red dot on the strainer and the red dot on the bowl are aligned.

Red dot on the strainer

Red dot on the Bowl

**3**

Push the squeezing screw into the strainer.

Squeezing Screw

Strainer

Bowl

**4**

Assemble the hopper onto the bowl.

① Make sure the arrow on the hopper and the red dot on the bowl are aligned.

Black arrow on the hopper

Red dot on the Bowl

**5**

Assemble the entire Top Set onto the base.

① Place the drum set on the platform.

Bad

Good

Juice ejection

# Assembly instruction – Type 1,2



Must connect the power cord.

Place containers under both ejections.  
(Juice & pulp ejection)

**Assembling rubber pad (Extraction packing) after cleaning.**

After cleaning, please plug back in the rubber pad as shown in below pictures.

Underneath the bowl, there is a yellow rubber pad which allows all the juice to only discharge from the fresh juice ejection.

The rubber pad is removable. Simply grab onto one side of the rubber pad and pull out.

Rubber pad



Enjoy the pure flavour and essence of nature with **HUROM**



## How to use HUROM Slow Juicer



The machine has three(3) settings.  
▶ "On" starts motor, start making juice.  
▶ "Rev" is reverse. Only use when something is stuck and you need to unclog.  
▶ "Off" is at center position. This allows the machine to turn off.



Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the Plunger.  
Please remove any hard seeds before using.  
Please cut or split any hard materials such as carrot into thin slices before putting into the machine.



Turn off the machine after using.  
Please dry your hands before touching the power switch.



Warning

Do not operate with wet hands.  
Do not pre-operate before inputting materials or Do not operate with an empty bowl.

# Warning while operating



Do not use longer than 30 minutes at a time.

Ignoring the warning may cause serious damage to the product.



Remove any hard seeds.

Ignoring the warning may cause serious damage to the product especially the screw.



Do not use anything as a pusher (fork, chopsticks, spoons, etc) other than the pusher itself.

 
Ignoring the warning may cause serious damage to the product.



Do not operate with wet hands.

Ignoring the warning may cause serious injuries or electrocution.

## When the machine is stuck and not operable, Please...

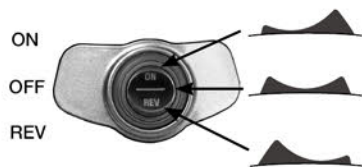

Turn off the machine and put it in reverse for few seconds then try operating again.

If the reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassembling, please try turning on the machine.



Warning

Please ensure that the switch is completely dry before operating.

# How to disassemble and clean

1 Turn machine "OFF".



Lift up the drum set from the platform



Use the brush to clean thoroughly after operating.



Warning

Please use smooth wet towel for cleaning the base.

Please do not use dish washer or high temperature cleaner for cleaning.



Order to disassembly.

1. Hopper
2. Squeezing screw
3. Strainer
4. Spinning brush
5. Bowl

5

Do not rinse the base directly with water; use a dry towel or a wet towel to clean.

6

Please dry the attachments after cleaning.

# HUROM Troubleshooting

	<i>Problem</i>	<i>Possible Reasons</i>	<i>Solution</i>
1	Bowl is stuck and does not detach from the base.	Excessive food in the bowl. Unknown substance in the bowl.	Press reverse switch 3-5 seconds. Repeat process 2-3 times. Then, push bowl upward while turning.
2	Hopper / lid is stuck.	Excessive food in the bowl. Unknown substance in the bowl	Press reverse switch 3-5 seconds. Repeat process 2-3 times. Then, press down on top of lid while turning.
3	Motor has stopped.	Excessive food in the bowl. Safety feature: automatic shutoff due to overheating.	Press reverse switch 3-5 seconds. Repeat process 2-3 times. If the motor has stopped, let it cool down before trying again.
4	Leaking from underneath the bowl.	Extraction packing not plugged in correctly.	Be sure to plug in extraction packing tightly after cleaning.
5	Squeaking noise when juicing.	Friction between the squeezing screw and bowl or food.	Squeaking sound is perfectly normal. Do not run the juicer without any food.
6	The unit vibrates.	Sign of motor working properly.	Vibration is perfectly normal. However, severe shaking which causes imbalance of the unit should be checked for a defective screw.

# HUROM Troubleshooting

	<i>Problem</i>	<i>Possible Reasons</i>	<i>Solution</i>
7	Water mark or scratch on the squeezing screw.	Molding marks during manufacturing process.	These marks and lines on the squeezing screw are perfectly normal.
8	Color stain on the bowl, strainer, spinning brush	Natural dye from food.	Hurom is chemical-free on all attachments. Therefore natural dye from food when juicing is perfectly normal. To reduce staining, rinse and clean immediately after each use. Diluted vinegar can be used.
9	Mold in silicone part of spinning brush.	Poor cleaning.	Be sure to clean thoroughly by detaching the silicone brushes from the spinning brush. Don't forget to plug it back in before juicing.
10	Strainer damage.	Ice, frozen foods, large hard seeds or pits, unknown substance, or excess food in bowl.	Refer to instruction manual for proper usage and juicing tips. Remember not to overcrowd food or force foods in.
11	Deformation of attachments.	Exposed to heat or abrasive materials.	Do not clean any attachments in dishwasher or use hard cleaners. Plastic tends to deform when exposed to high heat.
12	Too much pulp coming out.	Excess food in bowl clogging up the strainer or food not cut into small pieces.	Cut food, especially fibrous food, into smaller pieces to avoid the fibers wrapping around the screw. Also input food at a slow pace allowing all the pulp to eject before adding more food.

# Product Specification

# Memo



Specification		
Product Name		HUROM Slow Juicer
Model Name		HU - 400
Voltage		230 - 240V
Frequency		50Hz
Power Consumption		150w
RPM		70 rpm
Electrical cord length		1.4 M +
Motor		Single-Phase induction
Weight		6.2 kg
Dimensions	Width	155 mm
	Length	213 mm
	Height	400 mm
Standard usage time		Less than 30 minutes continuously

Oscar  
**HU-400**  
Pro

Low Speed Technology System  
**HUrom**<sup>®</sup>  
Worlds fastest cold press juicer

[www.vitality4life.com](http://www.vitality4life.com)